



Removing and installing coolant temperature sender -G62-

Removing

- Drain off coolant → Chapter.
- Carefully pull engine cover panel off four retaining pins one after the other -arrows-.

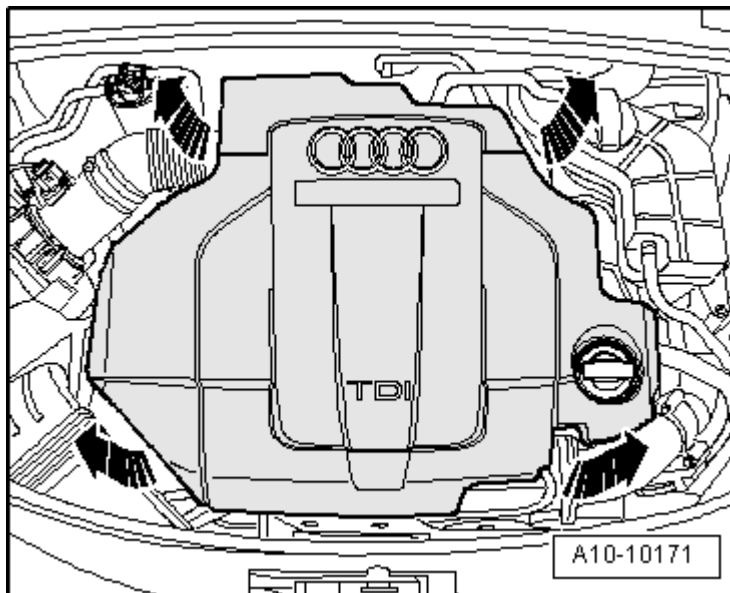

- Unplug electrical connector -1- at air mass meter -G70-.
- Remove air intake hose. To do so, release hose clip -2- and clamps -arrows-.

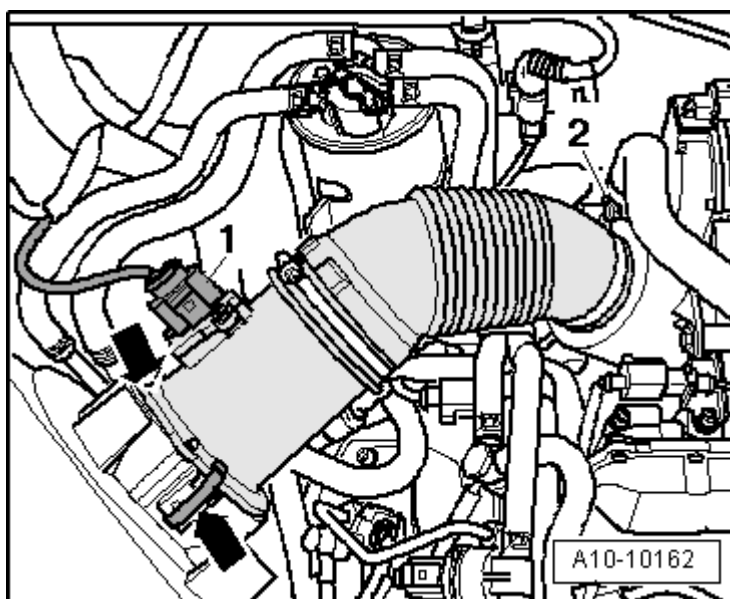

- Unplug electrical connector -1- at coolant temperature sender -G62-.
- Detach retaining clip -2- and remove coolant temperature sender -G62-.

Installing

Installation is carried out in the reverse order; note the following:



Note

- ◆ Renew O-ring.
- ◆ Secure all hose connections with the

correct type of hose clips (same as original equipment) → *Electronic parts catalogue*.

- ◆ To ensure that the air hoses can be properly secured at their connections, spray rust remover onto the worm thread of used hose clips before installing.
- Fill cooling system → **Anchor**.

