

Radiator and radiator fans - exploded view

1 - Radiator fan 2 - V177-

- With radiator fan control unit 2 -J671-
- Removing and installing → Chapter

2 - Bolt

- 5 Nm

3 - Bolt

- 3.5 Nm

4 - Fan wheel

- Not supplied separately

5 - Radiator cowl


- Removing and installing → Chapter

6 - Coolant hose

- Lift retaining clip to detach
- Connecting to radiator → Fig.

7 - Coolant hose

- Lift retaining clip to detach
- Connecting to radiator → Fig.

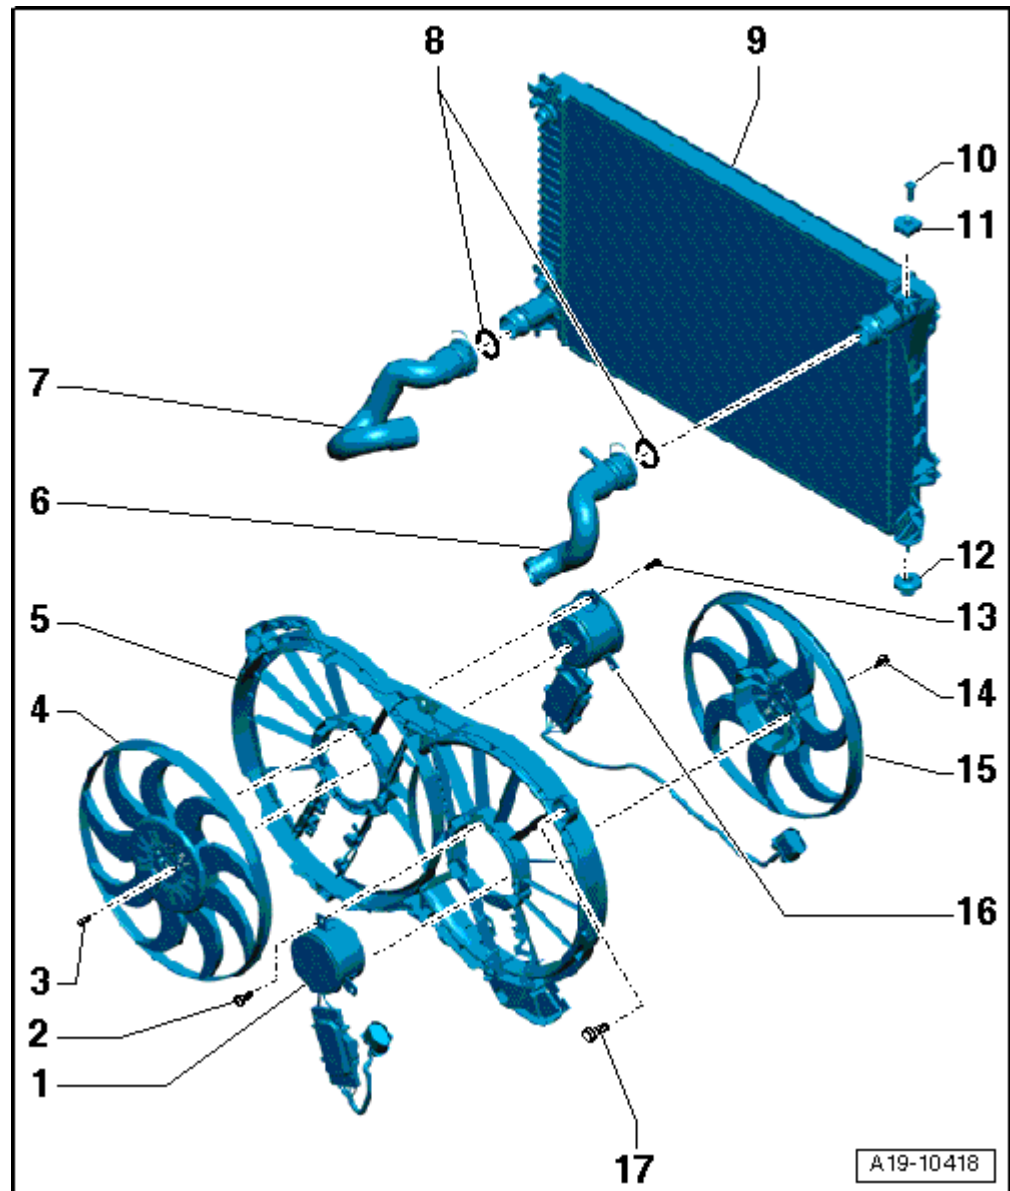

8 - O-rings

- Renew

9 - Radiator

- Removing and installing → Chapter
- If renewed, change coolant in entire system

10 - Retaining pin

11 - Rubber buffer

- Use screwdriver to release and pull off

12 - Rubber bush

13 - Bolt

- 4.5 Nm

14 - Bolt

- 3.5 Nm

15 - Fan wheel

- Not supplied separately

16 - Radiator fan -V7-

- With radiator fan control unit -J293-
- Removing and installing → [Chapter](#)

17 - Bolt

- 2 Nm

Connecting coolant hose with plug-in connector

- Remove old O-ring -2- from coolant hose -3-.
- Lubricate new O-ring with coolant additive and fit O-ring in coolant hose.
- Press coolant hose onto radiator -1- or coolant pipe until it engages with a click.
- Press coolant hose in again and then pull to check that plug-in connector is correctly engaged.

