



## Removing and installing roof end trim

### Special tools and workshop equipment required

- ♦ Removal wedge -3409-

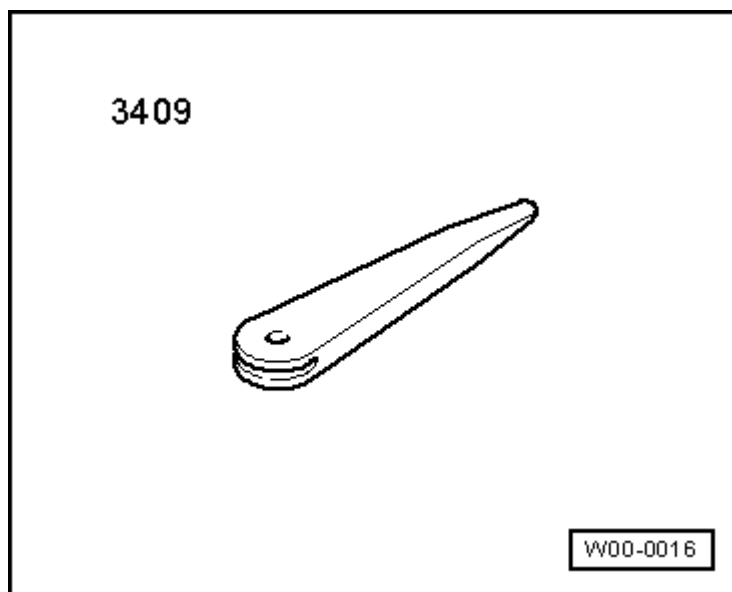


- ♦ Removal wedge -T40280- is needed to remove any clips left in body mounting points

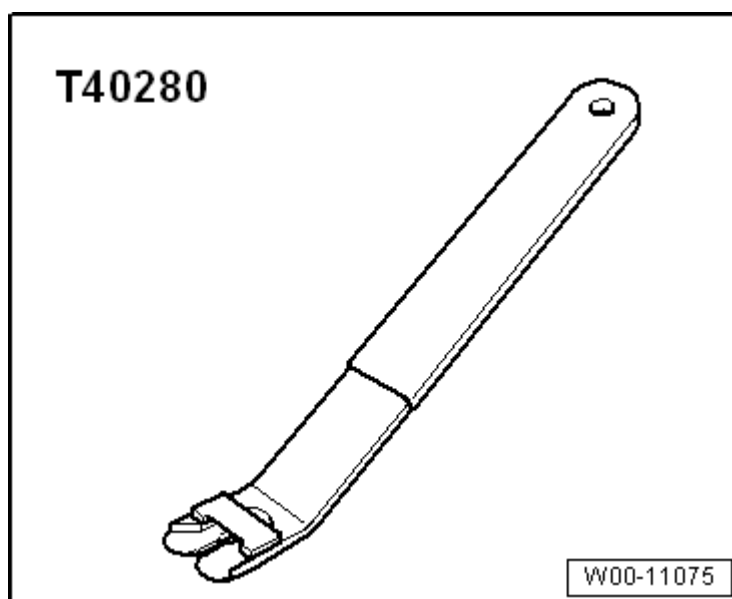

### Removing

- Use removal wedge -3409- to carefully prise luggage compartment light -1- out of opening in headliner -arrow-.
- Unplug electrical connector.

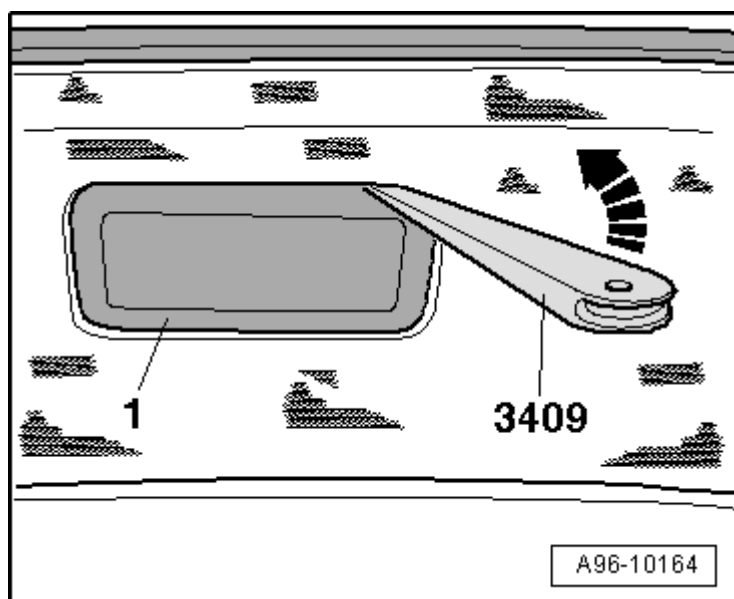

- Remove bolt -2-.
- Carefully pull roof end trim -1- off roof frame towards rear -arrows-.


### Installing

Install in reverse order of removal; note the following:



#### Note

- ♦ *Locking fluid residue must always be removed from threaded holes for roof end trim after it has been removed. Otherwise, the new bolt could seize when screwed in and shear off when it is removed.*
- ♦ *You can use a thread tap to clean the threaded holes.*
- ♦ *Renew self-locking bolts.*
- ♦ *Renew spring clips if damaged.*
- Position roof end trim in such a way that retaining clips make contact with D-pillar trim and spring clips make contact with body cut-out.
- Slide roof end trim on until you hear spring clips engage.

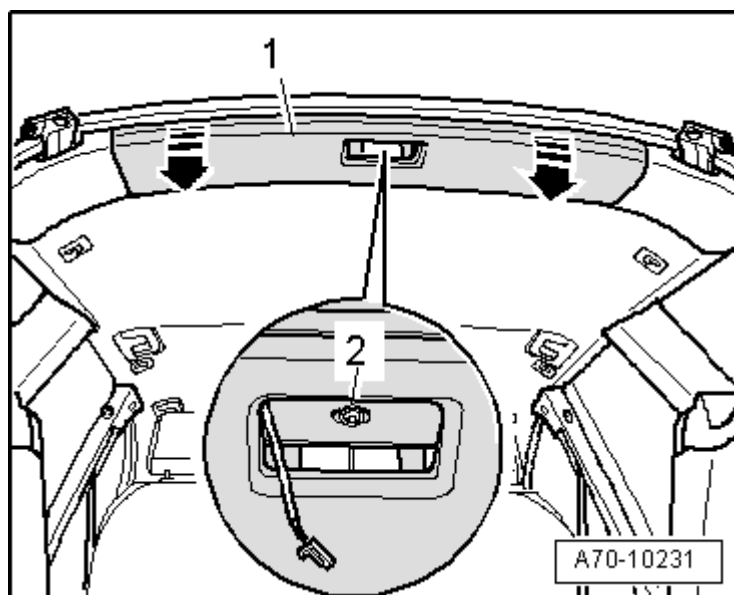

### Tightening torque

Component	Nm
Roof end trim to body	4 → Remark

<sup>1)</sup> Renew bolt.