

Activated charcoal filter system - exploded view

1 - Breather pipe

- ❑ From fuel tank
- ❑ Press release tab on pipe connector to disconnect
- ❑ Secured to underside of vehicle (right-side)

2 - Breather pipe

- ❑ To fuel tank
- ❑ Press release tab on pipe connector to disconnect
- ❑ Disconnect at front below underbody cover (right-side)

3 - Bolt

- ❑ 1.5 Nm

4 - Breather pipe

- ❑ To activated charcoal filter solenoid valve 1 - N80-
- ❑ Press release tab on pipe connector to disconnect
- ❑ Connection point below wheel housing liner (front right)

5 - Activated charcoal filter

- ❑ Beneath wheel housing liner (front right)
- ❑ Removing and installing → [Chapter](#)

6 - Connecting hose

7 - Vent pipe

- ❑ Secured to underside of vehicle (right-side)
- ❑ Open to atmosphere at rear of vehicle

