


Removing and installing entry light in exterior mirror -W52-/-W53-

Special tools and workshop equipment required

- ◆ Removal lever -80 - 200-
- ◆ Protective gloves

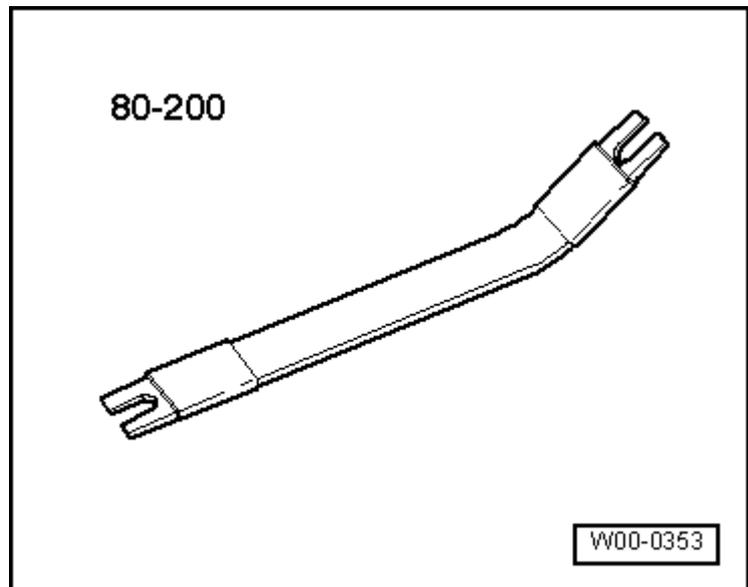

Removing



WARNING


Wear protective gloves.




Note

Mask the area around the mirror housing with a soft cloth to protect the paintwork.

- Pry mirror glass -1- out of the mirror adjustment unit using removal lever -80 - 200--arrow-.
- Unplug electrical connectors.

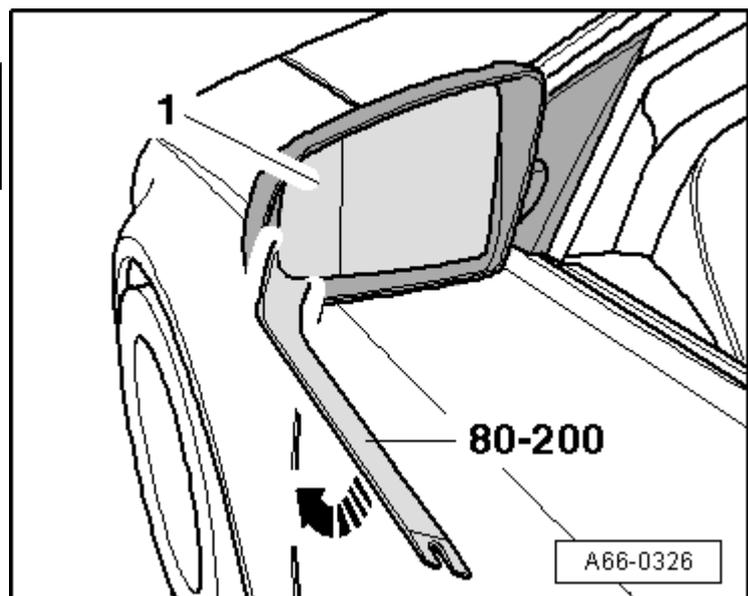

- Remove bolts -1- and -3-.
- Release retaining clip -arrow A-.
- Pull housing out of cover -2- slightly - arrows B- and push the outer side of the cover downwards -arrow C-.
- Detach cover from mirror mounting.
- Unplug electrical connector -4-.

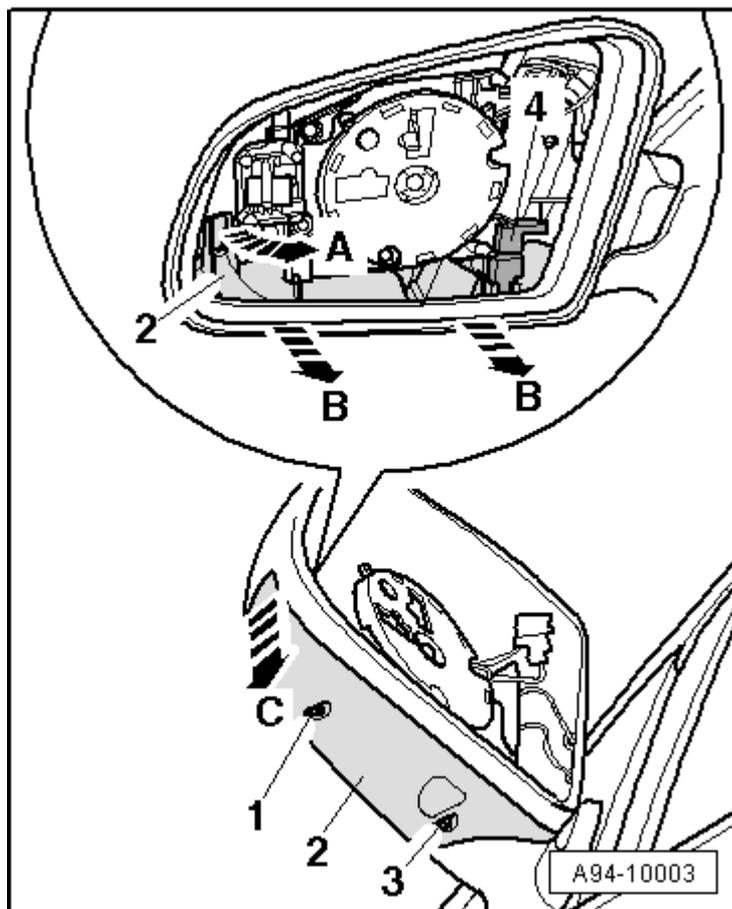

- Unscrew bolt -1- and detach entry light in exterior mirror -2- from cover.

Installing

Installation is carried out in the reverse order; note the following:


Note

Entire entry light in exterior mirror must be renewed as a complete unit if LED is defective.

- Fit mirror glass onto mirror adjustment unit and press mirror glass into place.

Note

Take care to only press at the centre of the mirror when pressing on.

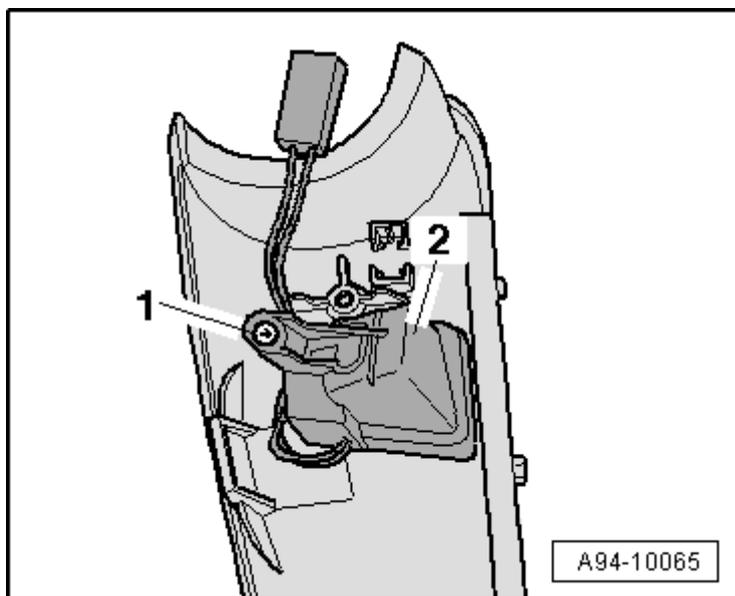

Tightening torques

Component	Nm
LED for entry light in exterior mirror to cover	1
Cover to mirror mounting	1