

Removing and installing operating unit for window regulator in driver door -E512-


Removing

- Switch off ignition and take out ignition key.
- Remove door trim (front) →Rep. Gr.70.
- Unplug electrical connector at operating unit for window regulator in driver door -E512-.
- Release fasteners -2- on side of armrest by pressing retaining element -arrows-.
- Pull operating unit for window regulator in driver door -E512--item 1- downwards out of door trim.



Note

If the operating unit for window regulator in driver door -E512- cannot be removed as described, the armrest must be removed →Rep. Gr.70.

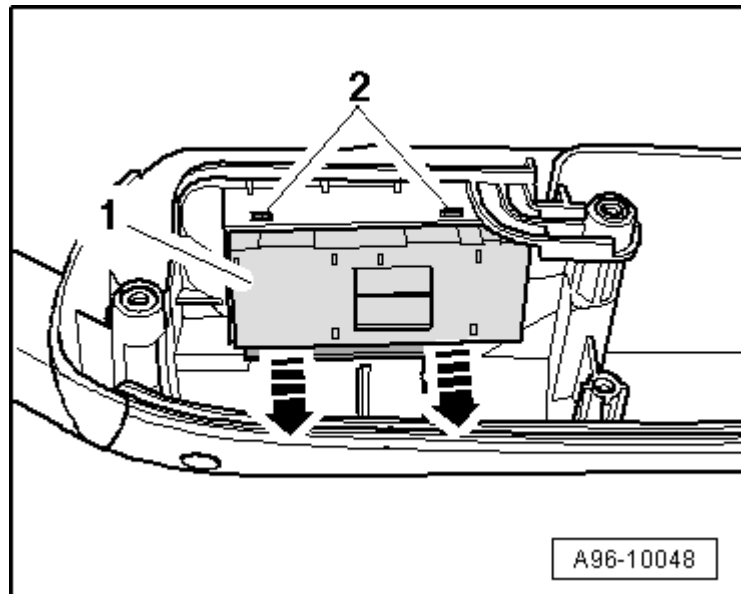

Installing

Installation is carried out in the reverse order; note the following:

- Press operating unit for window regulator in driver door -E512- into switch mounting until retaining hooks engage.
- Install door trim (front) →Rep. Gr.70.