



Removing and installing rear side airbag igniter on driver side -N201- and rear side airbag igniter on front passenger side -N202- (fixed rear seat backrest)

Special tools and workshop equipment required

- ♦ Torque wrench -V.A.G 1410-

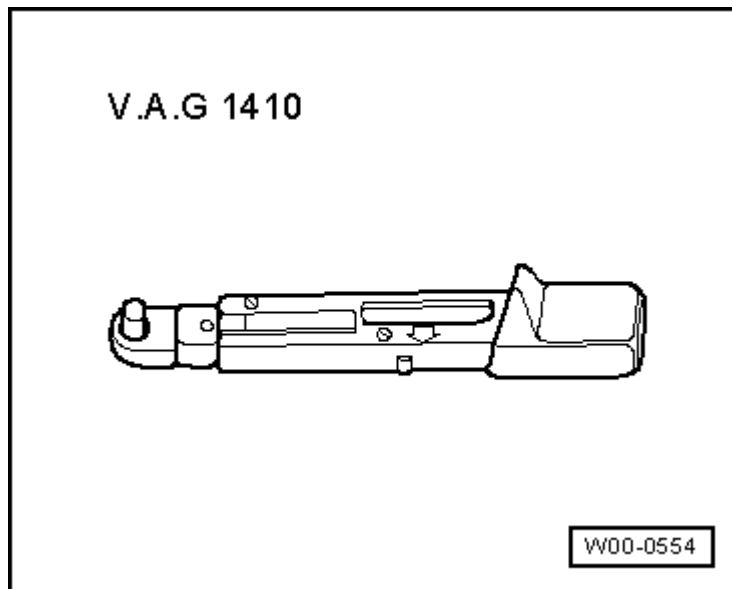


- ♦ Vehicle diagnostic, testing and information system -VAS 5051B-

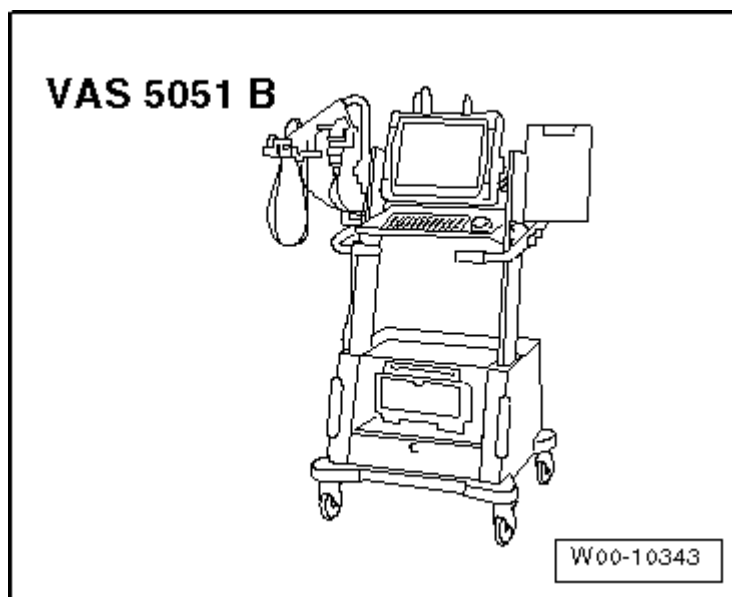

WARNING

Observe safety regulations for working on airbags → **Chapter** and side airbags → **Chapter**.

- 1 - Fixed rear seat backrest
- 2 - Protective cover for side airbag
- 3 - Side airbag (rear; driver/passenger)

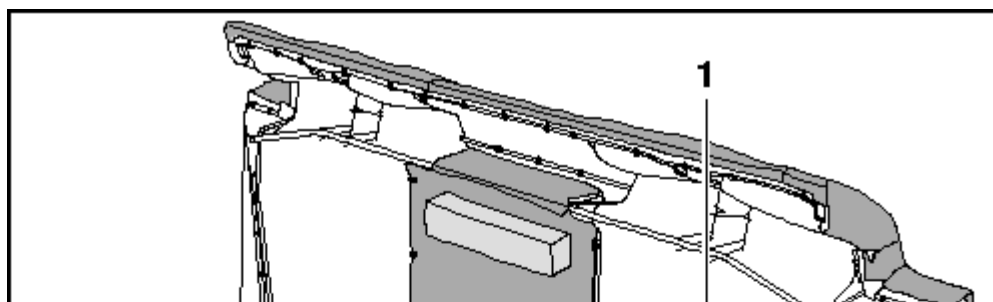

side)

♦ Removing

- Disconnect battery earth strap →Electrical system; Rep. gr.27.
- Remove rear seat bench → Chapter.
- Remove rear seat backrest → Chapter.
- Remove bolts -4- (2x).
- Pull side airbag -3- downwards out of protective cover -2-.

♦ Installing

Install in reverse order of removal. Note the following:

- Switch on ignition.



Caution

Make sure nobody is in the vehicle when the battery is being connected.

- Connect battery earth strap.
- Observe measures to be taken after connecting the battery →Electrical system; Rep. gr.27.



Note

If airbag warning lamp -K75- indicates a fault following installation, use vehicle diagnostic, testing and information system -VAS 5051B- to interrogate, erase and then re-interrogate event memory.

4 - Bolts (2x)

- Tightening torque: 8 Nm