

.B501	Temperature sensor for intake air
.B511	Temperature sensor evaporator
10A	10A fuse
150A	150A maxi fuse
30	Battery voltage - 30
31	Ground - 31
40A	40A fuse
58d	Instrument illumination
5A	5A fuse
A150	Vehicle start/ accessmodule
A26	Climate control module
A28hb	Heater blower control module
A38	Solar cell roof
A62	Transistor
B10pt	A/C pressure and temperature sensor
B19s	Solar sensor
B21t	LH passenger compartment temperature sensor
B22t	RH passenger compartment temperature sensor
B24cn	LH center vent position sensor
B25t	Center passenger compartment temperature sensor
B26cn	RH center vent position sensor
bg	beige
bl	blue
br	brown
C	CAN-BUS - comfort
C05hl	Connector by LH headlight
C13	Connector at cowl LH
C14	Connector at cowl RH
C21	Connector by LH A-pillar
C26hl	Connector over head lining - front
C27	Connector by vehicle bottom - driverside
C-C	CAN-BUS comfort
G10	Ground at cowl
G13	Ground at cowl LH
G21	Ground by LH A-pillar
G22	Ground by RH A-pillar
G28	Ground behind dashboard center
ge	yellow
gn	green
gr	grey
hr	pink
K26	Terminal 15 relay
K90	Switch
lgn	light green
li	purple
M17	Coolant circulation pump
M23c	Servo motor for LH cheest vent
M23f	Servo motor for LH footwell flap
M25c	Servo motor for center vent
M25ca	Servo motor for cold air flap
M25dp	Servo motor for dynamic pressure flap
M25rs	Servo motor for rear seat vent

M28	Heater blower motor
M29	Air recirculation motor
M62	Servo motor for defroster
or	orange
P21L	Passenger compartment fusebox - LH
P22R	Passenger compartment fusebox - RH
P23	Passenger compartment relay-/ fusebox-1
P50	Luggage comp relay/fusebox
rt	red
sw	black
ws	white
X26	Splice behind dashboard
Y02k	AC compressor
Y23hr	LH heat control solenoid valve
Y24hr	RH heat control solenoid valve
Y57	Solenoid valve