


# Removing and installing bumper cover

## Saloon

### 1 - Cover

- ❑ Removing:
- ❑ Remove luggage compartment side trim.  
→ Rep. gr.70
- ❑ Unplug electrical connectors for parking aid senders at control unit (on left beneath rear light).
- ❑ Unscrew bolts from underside of cover and from wheel housing liner  
→ Anchor.
- ❑ Unscrew cap nuts -12- (can be accessed from luggage compartment)  
→ Anchor.
- ❑ Unbolt wheel housing liners (rear section).
- ❑ Unclip side sections of cover from guide.
- ❑ Detach cover.

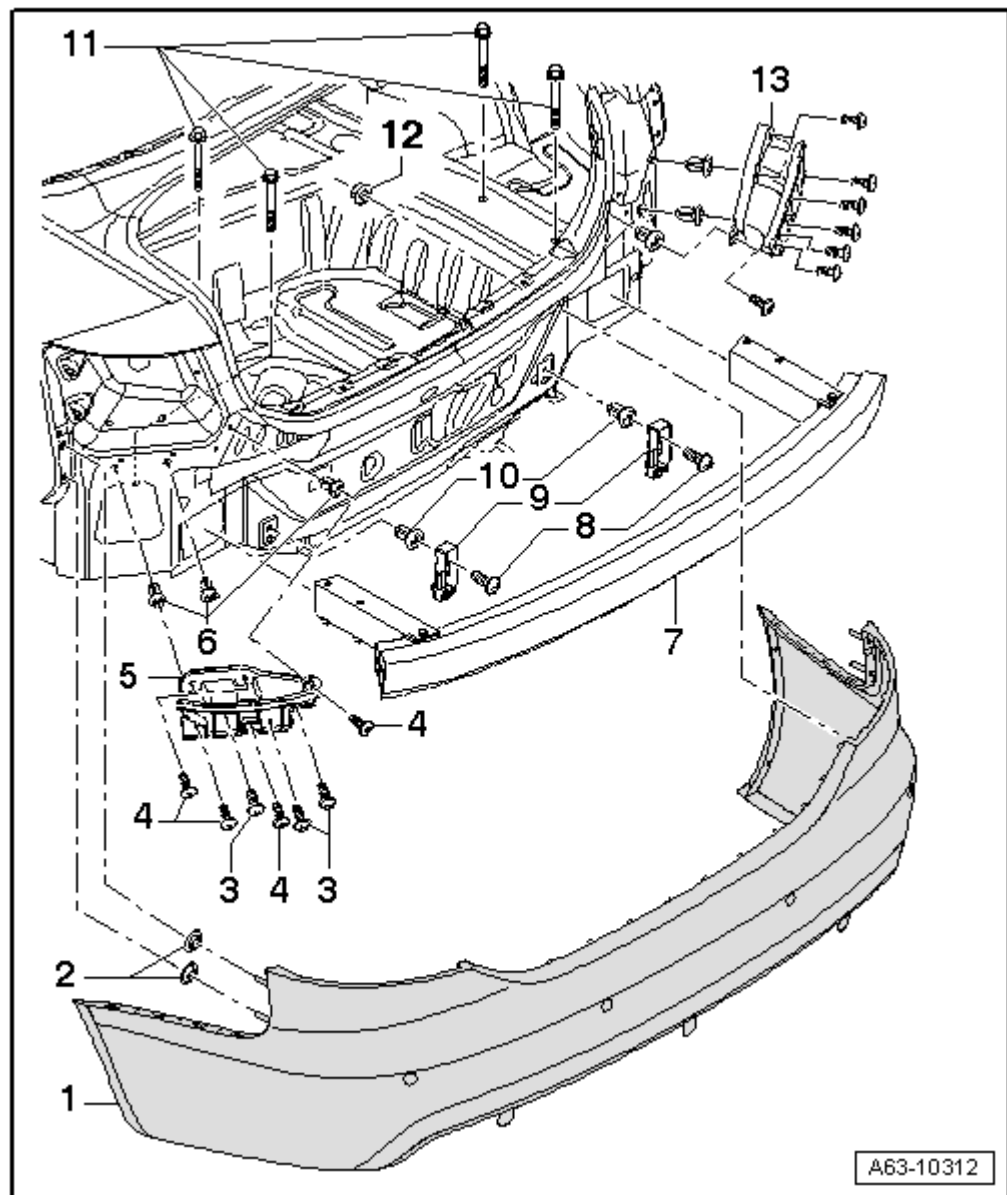

### 2 - Grommet

- ❑ Grommets must be pushed onto studs before installing cover.

### 3 - Bolt

- ❑ 1 Nm

### 4 - Bolt

- ❑ 1 Nm

### 5 - Adjuster element (left-side)

### 6 - Clip

- Inserted into rear cross panel

## 7 - Cross member for bumper

- Before removing, detach cover -1-.
- Removing → Chapter

## 8 - Bolt

- 1.5 Nm

## 9 - Retaining strap

## 10 - Clip

- Insert in rear cross panel.

## 11 - Bolt

- 20 Nm

## 12 - Nut


- 4 Nm

## 13 - Adjuster element (right-side)

### Avant

## 1 - Bumper

- Removing:
- Remove luggage compartment side trim.  
→ Rep. gr.70
- If fitted, unplug electrical connectors for parking aid senders at control unit (on left beneath rear light).
- Unscrew cap nuts -8- (can be accessed from luggage compartment)  
→ Anchor.
- Unscrew bolts for wheel housing liners in area of cover.
- Remove bolts on left and right at guide  
→ Chapter.

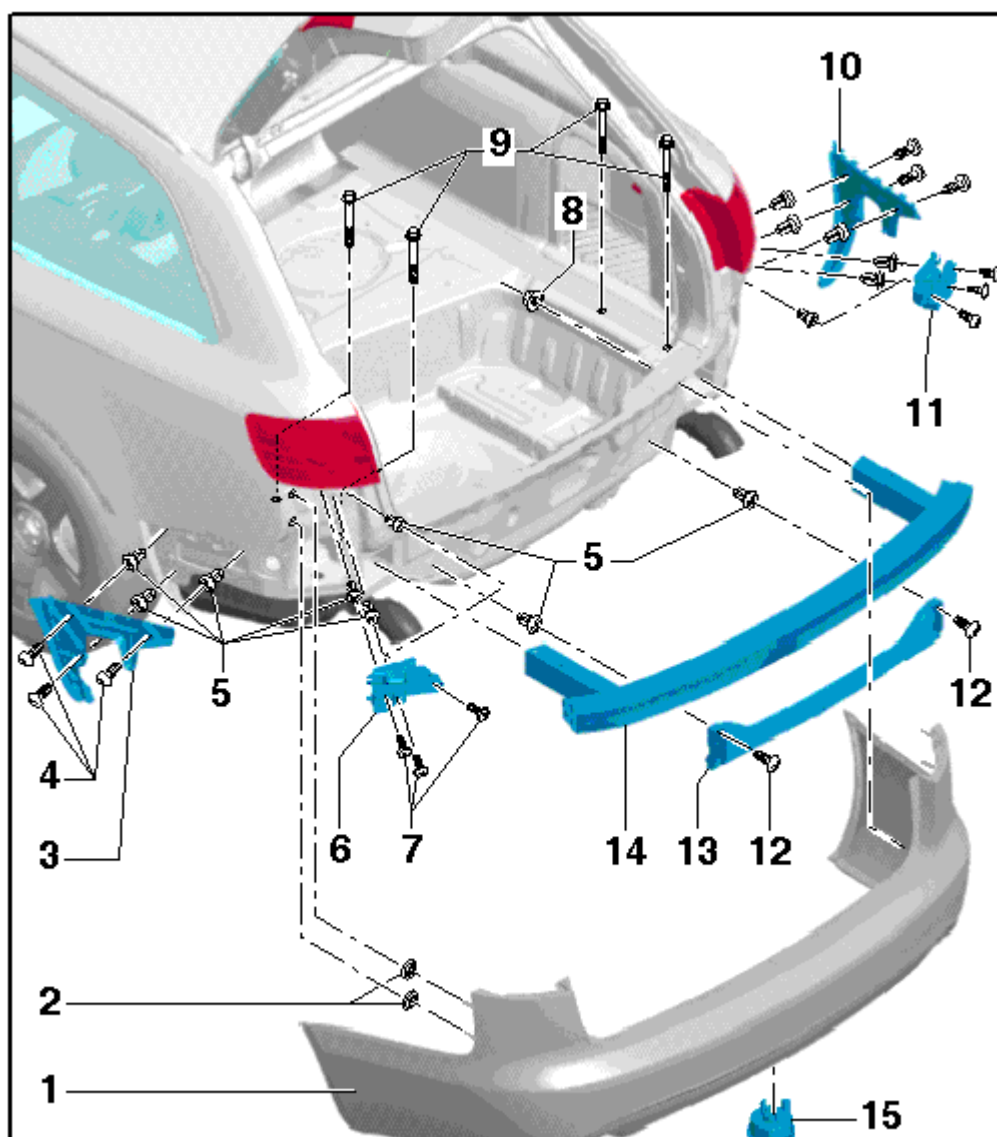

- ❑ Unclip side sections of cover on side of guide.
- ❑ Detach cover.

**2 - Grommet**

- ❑ Fit onto studs before installing cover.

**3 - Adjuster element (left-side)****4 - Bolt**

- ❑ 1 Nm

**5 - Clip**

- ❑ Inserted into rear cross panel

**6 - Adjuster element (left-side)****7 - Bolt**

- ❑ 4 Nm

**8 - Nut**

- ❑ 4 Nm

**9 - Bolt**

- ❑ 20 Nm

**10 - Guide (right-side)**

- ❑ Removing → Chapter

**11 - Adjuster element (right-side)****12 - Bolt**

- ❑ 1.5 Nm

**13 - Retaining strap****14 - Cross member for bumper**


- ❑ Removing and installing → Chapter

**15 - Support piece**

- ❑ Removing and installing → Fig.

**Removing spoiler (RS 6)**

- Bumper -1- removed
- Unclip spoiler -2- at all fastening points and pull out.
- When installing, ensure that fasteners are fully engaged.

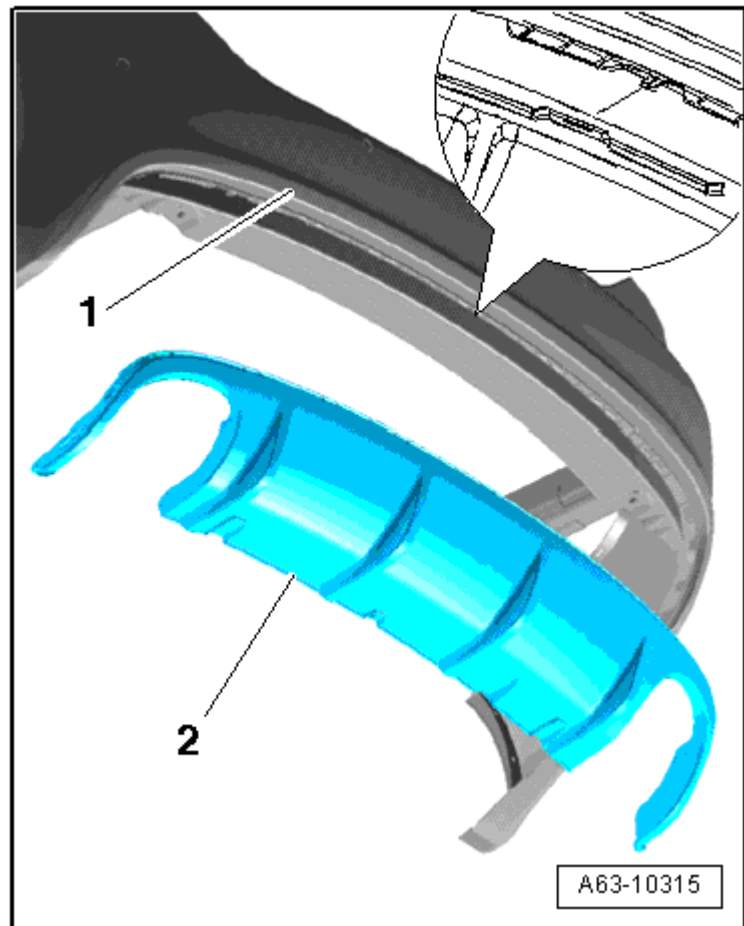

**allroad vehicles**



**Note**

*Only features which are different from the standard bumper are described here.*

**1 - Bumper (rear)**

- ❑ The procedure for removal and installation is the same as for standard bumpers.
- ❑ Does not have to be removed to detach spoiler and impact protection


## 2 - Bolt

- 2 Nm

### 3 - Bolt

- 2 Nm

## 4 - Spoiler

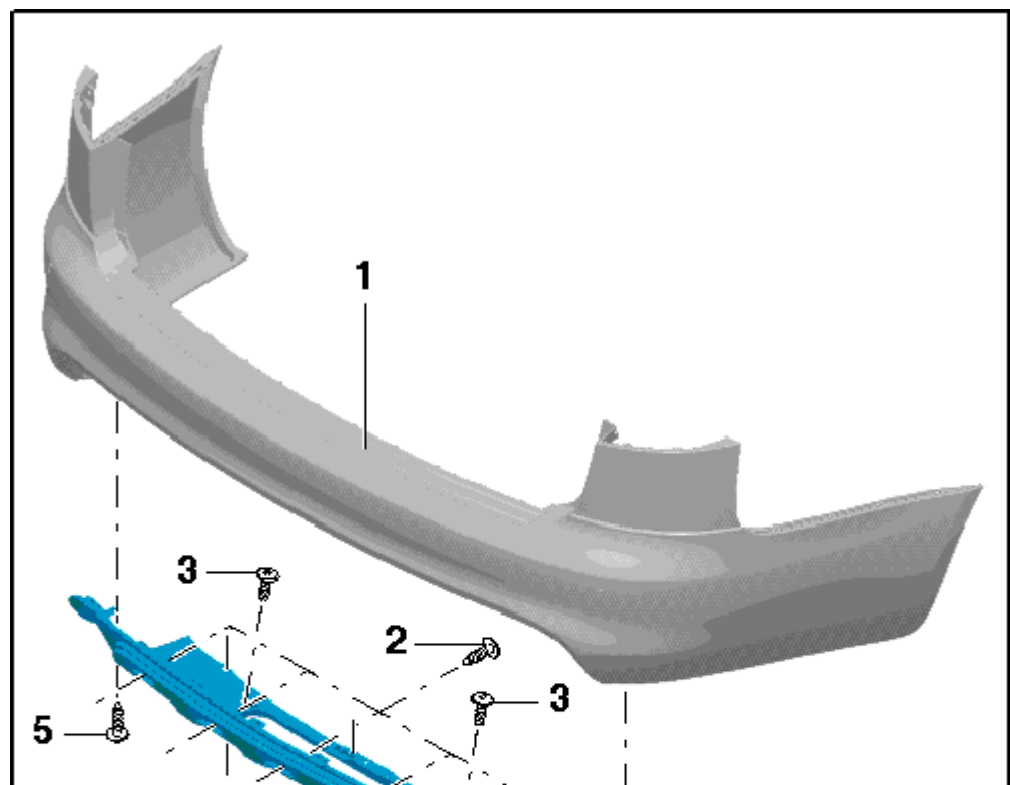

- ❑ Bumper installed
- ❑ Remove bolts -2- and -5- and pull spoiler out of bumper together with impact protection.

#### 5 - Bolt

- ❑ 2 Nm

#### 6 - Impact protection

- ❑ Bumper installed
- ❑ Spoiler removed
- ❑ Remove bolts -3- and -8- and detach impact protection from retainers.

#### 7 - Washer

#### 8 - Quick-release fastener

- ❑ 4 Nm

### Attachment points

#### 1 - Cover

- To remove, unscrew all nuts and bolts and detach cover towards rear.

#### 2 - Self-tapping screw

- ❑ 1 Nm

#### 3 - Self-tapping screw

- ❑ 1 Nm

#### 4 - Cap nut

- ❑ 4 Nm


#### 5 - Nut with washer

- ❑ 4 Nm

#### 6 - Guide

#### 7 - Grommet

- Grommets must be pushed onto studs before installing cover.

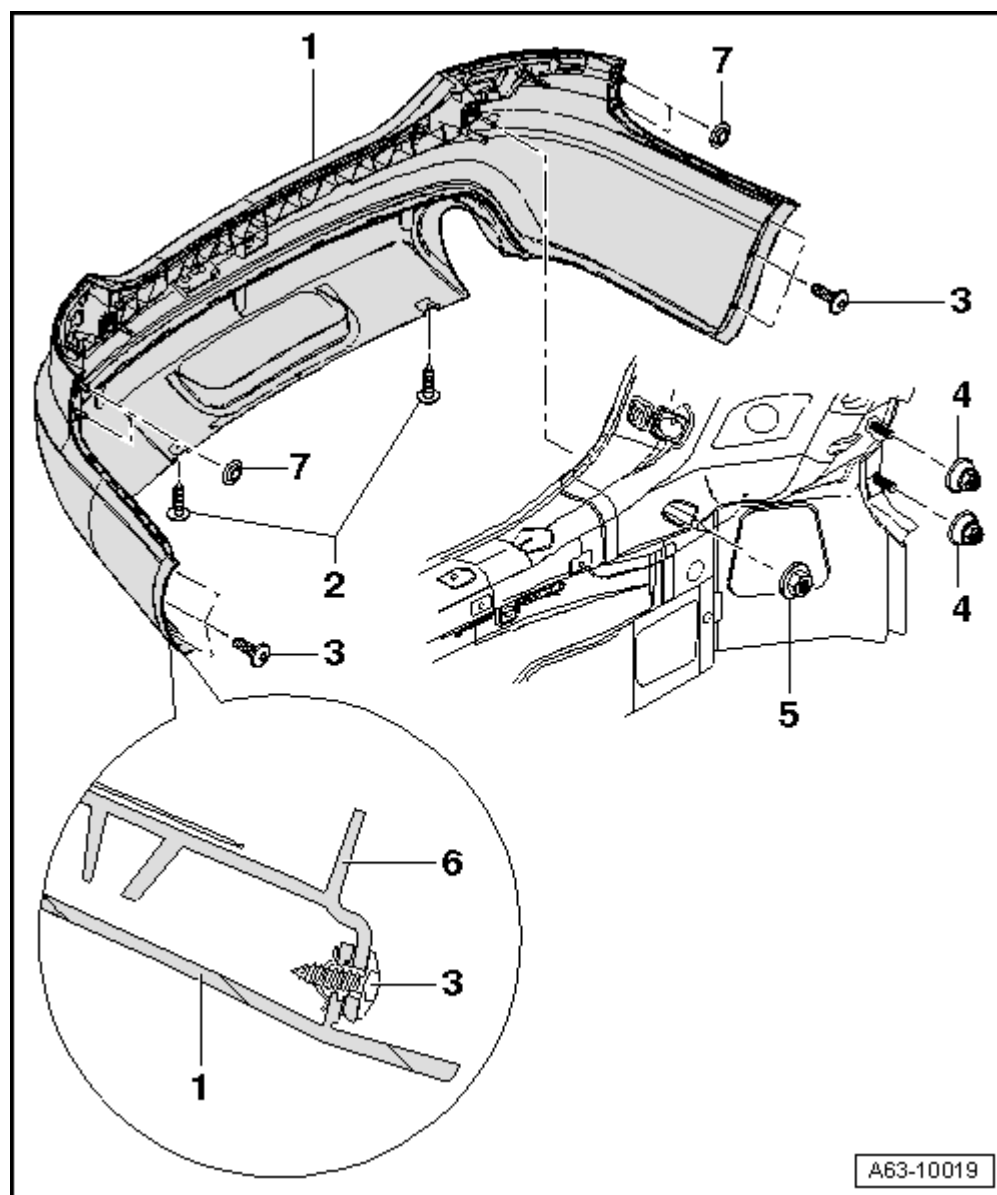

A63-10019


## Installing support piece



### Note

*The support piece only has to be installed if you are fitting a new bumper cover.*

- To remove, press catch -arrow- to side and detach support piece downwards out of cover -1-.
- Fit support piece -2- in cover as shown and make sure it engages.
- Do not remove retaining tab until you have completed installation of cover.

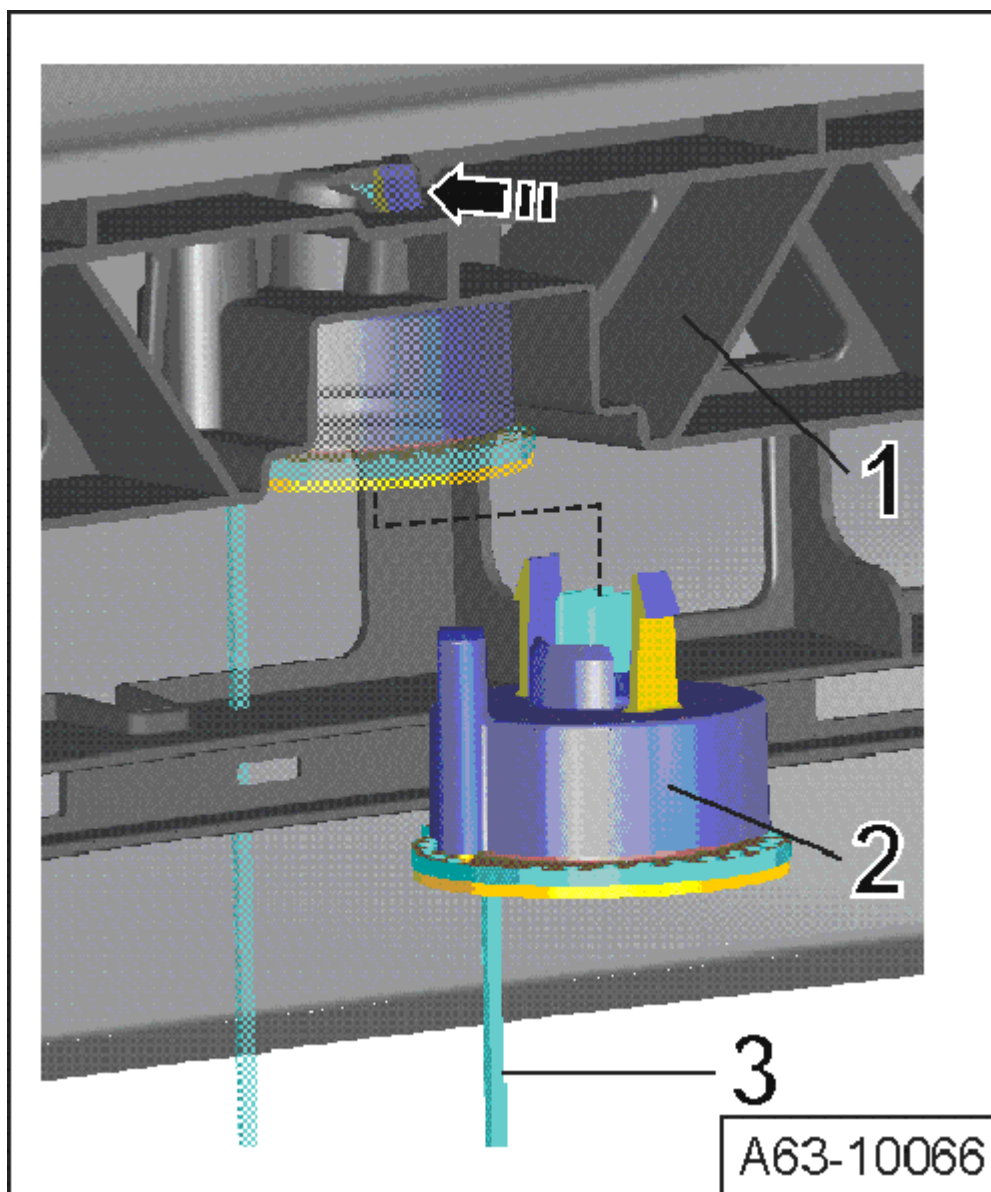

## Releasing support piece



### WARNING

***Never release support piece following removal, as this could cause injury.***

When re-installing the "old" bumper cover, the "old" support piece can remain installed.

- If bumper cover is renewed, new support piece must be clipped into bumper cover from underneath.
- Once you have completed installation of the bumper cover, release support piece by pulling retaining tab -arrow-.



### Note

*Pulling the release tab releases the support piece, so that it then supports the bumper cover against the cross member.*

