

Coding diesel direct injection system control unit -J248-

- Connect up the vehicle diagnosis and service information system -VAS 5052- and select vehicle system “Engine electronics”. When doing this, the ignition must be switched on.
- Select diagnostic function “Coding control unit” from list.
- Enter control unit coding via key pad as specified in coding table

Make up the code number according to the following example:

Audi A4	02			
Not used		0		
Emissions standard MVEG II			0	
Front-wheel drive and manual gearbox				2
Code number	02	0	0	2

Coding versions for diesel direct injection system control unit -J248-

Vehicle type	Not used	Country/emissions	Gearbox
00 =	0 =	0 = MVEG I MVEG II	0 =
01 =	1 =	1 = EU III D	1 =
02 =	2 =	2 = ---	2 =
03 =	3 =	3 = ---	3 =
04 =	4 =	4 = ---	4 =
05 =	5 =	5 = ---	5 =
06 =	6 =	6 = ---	6 =
07 =	7 =	7 = ---	7 =



Note

The abbreviation “ESP” stands for Electronic Stabilisation Program

- Confirm entry by touching Q key.

**Note**

The newly entered coding will be activated the next time the ignition is switched on.