

Removing and installing accelerator pedal module


- Remove storage compartment on driver's side → [Rep. Gr.68](#).
- Unplug electrical connector.
- Remove bolts 3.
- Remove accelerator pedal module.

Installation is carried out in the reverse order; note the following:

Vehicles with automatic gearbox:

If accelerator position sender or engine control unit is replaced, kick down function must be adapted on vehicles with automatic gearbox → [Chapter](#).

Tightening torque

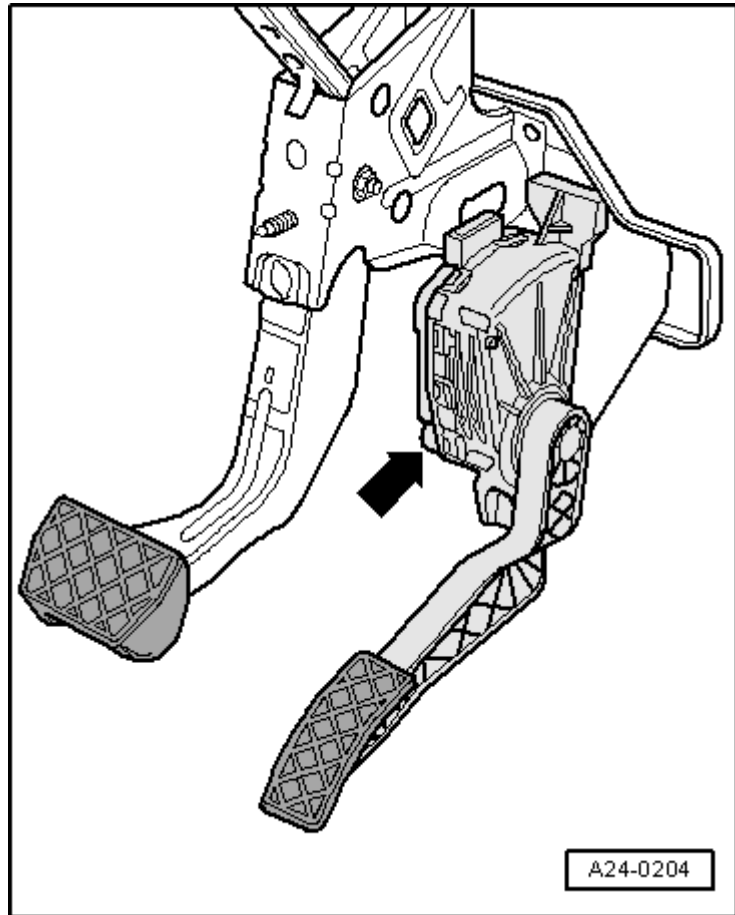

Component	Nm
Accelerator pedal module to pedal bracket	9