

Accelerator mechanism on vehicles with accelerator position sender - exploded view of components

1 - Electrical connector

2 - 10 Nm

3 - Accelerator position sender -G79

- Checking
→ Chapter
and
→ Chapter
- Adjusting
→ Chapter
or
→ Chapter
- To remove and install, remove mounting bracket - item 9-

4 - Cable cam

5 - 10 Nm

6 - Operating rod

- With threaded collar for adjustment
→ Chapter
or
→ Chapter

7 - Accelerator pedal stop

- Position on vehicles with manual gearbox: marking "H" or "HS" (hand-shift) must be visible
- Position on vehicles with automatic gearbox: marking "A" or "AG" must be visible

8 - Accelerator pedal

9 - Mounting bracket

- Prior to removal, detach steering column at steering box → Rep. Gr.48

